



IP WIRELESS CAMERA with PAN & TILT

...Protecting What Matters Most.

SWIPC



Operating Instructions

1. Software Installation

- 1) For Apple: Download the SW SECURITY app in the APP store.
- 2) For Android: Download the SW SECURITY app from the Google Play Store.


⚠ Data usage may apply.



2. Account Registration

Note: You must create an account and register your device before operating.

- 1) Click "Registration" at the bottom of the log-in screen.
- 2) Select either "Mobile Registration" or "Email Registration," then click Next.

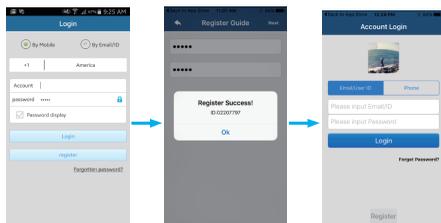

- 3) MOBILE REGISTRATION: Input number, password and confirm. You will receive confirmation with ID. You may write this ID number down in case it is needed again.
- 4) Click OK.
- 5) At account log-in input password and click log in.
- 3) EMAIL REGISTRATION: The next screen is "Register Guide." Enter your email address. Create a password that you can easily remember and input the same password again. Click, "Register."
- 4) Once registered, you will see the "Device List" Screen.



3. ONLINE CONNECTION

- 1) Plug-Camera into outlet using the included power cord. You will also connect an Ethernet cable (not included) into the camera and into your wireless router.

- 2) Once camera is plugged in, it will self-test by moving in all directions. Once the camera has stopped performing this function, you may begin adding the camera to the APP.

- 3) On the device list screen, press the "+" symbol. This will give you the ability to add the camera via smartlink or manual connection. Choose "MANUAL ADD."


- 4) Enter the camera's credentials as requested. The Camera ID and temporary password are located on the bottom of your camera. The "Device Name" can be any name you would like it to be.

- 5) Click OK in the top right corner.



4. WI-FI CONNECTIVITY

- 1) After following all steps listed above, you should see the camera listed on the "device list" screen in the APP.
- 2) Next, click on the camera ID(s) you just added.
- 3) Now, enter the camera's password associated with the camera. This can be found on the bottom of the camera.
- 5) Once the password has been entered, click "save."
- 6) You should see the camera that you have added is now "online."
- 7) Click on the "settings" symbol.
- 8) A drop down will occur. Click "settings"
- 9) Click network Settings.
- 10) Choose WIFI.

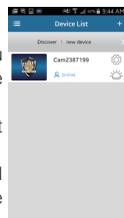

- 11) Choose the WIFI network that you wish to connect to. NOTE: you will want to choose the WIFI connection closest to the camera's final resting place.
- 12) Prompt: "Modifying the network may cause device disconnection, please confirm the action!"
- 13) Click change.
- 14) Now, enter your WIFI password and click, ok.
- 15) Once connected to your wireless internet, there will be a green check beside the wifi you are connected to.

- 16) Click the back arrow beside "Network Settings."
- 17) Click the back arrow beside "Settings" at the top of screen.

- 18) You are now back at the "device list" screen and should see your camera ID. The device should also show that you are online.

- 19) You are now connected to your wireless network. You may unplug and move your camera to it's final resting place.

- 20) Remember, once you plug camera back in, it will self test as mentioned previously. Once self testing is complete (10 seconds), please click on your camera for remote viewing.



5. Real-Time Monitoring

On the "Device List"page, select the device you would like to use and you will enter Real-Time mode.

6. Recording Setup

- 1) Recording: This camera supports a maximum 64GB microSD card for recording storage. To record, insert the microSD card first, then enable the SW SECURITY APP. Click "Device List", then select your device. Then Settings, and select "Recording Setting." Manual, Alarm Recording and Scheduled Recording options are available.

- 2) Playback: This camera supports playback on mobile phones. To begin playback, open the SW SECURITY APP, navigate to the Devices page, and select your device. You will then select Playback and choose the file that you would like to view.

- 3) Image Captures: To view Image Captures, select the list menu icon in the top left corner of the Device List screen. Select images. Select your device. Please note that image captures are only available to view through the application. They do not record onto the SD card.

- 4) There are three ways the camera can record video to an SD card: continuously, only when motion is detected, or you can set your device to record video to the SD card at a scheduled time. To change the Record Settings of the SD card, select the settings icon in the upper right corner of your device listed on the Device List screen. Select settings. Select Record Settings. Manual Recording will continuously record to the SD card until the SD card is full. Video files are saved every half hour. Alarm recording will record to the SD card when the motion detection feature is turned on and motion is detected. Scheduled recording will only record to the SD card during a specified scheduled time. Videos recorded to the SD card can also be viewed through the application.

- 5) Video Viewing: To view videos, select the list menu icon in the top left corner of the Device List screen. Select Records. Select your device. Select the day the video was recorded along the top of the screen. Then select the video you would like to view. To view motion alarm alerts, select the list menu icon in the top left corner of the Device List screen. Select Message. Select your device. The date and time of each motion alert will be listed.

- 6) Videos recorded by selecting the video record icon while viewing the live feed will only be saved onto your phone and viewable through the application.

- 7) To allow others to view the video feed from your device on their phones without allowing them to change the settings on the camera, you must set up a visitor password. Select the settings icon in the upper right corner of your device listed on the Device List screen. Select settings. Select security settings. Select Visitor Password. Input visitor password. Then hit save in the upper right-hand corner of the screen.

7. Zone Settings

- 1) Pairing Detectors:

Note: This feature is optional; please verify your device is capable before attempting.

The SWIPC supports pairing with 8 remote controls, 8x8=64 wireless detectors (433 Hz).

- A. Add devices to the "Device List" in the SW Security App.

- B. Click "Device List", then Device Name, then Settings, and Zone Settings.

- C. For example, to pair a door sensor installed in the hall, code as 1. First click "Hall" button and select "1." A window will pop-up; select "OK" to set the sensor. When the door is opened, the sensor will be triggered. If the match is successful, you will be notified and the gray number will change to blue.

- D. Navigate back to the device list and click the lock icon beside the device to arm. The detector will be active 10 seconds after the detector has been armed.

- E. Follow the same steps listed as A, B, and C. The function is the same as the lock icon as described in D. It can be used for arming and disarming, but will need to be programmed to match the device.

- 2) Deleting Paired Detectors

- A. Select the paired detector and confirm the deletion.

- 3) Alarm Settings

There are two methods to arm the device. The first method is to press the Alarm Icon for your camera in the "device list" screen. The second method is to click on your camera in the device list. During live view, click the alarm icon. When the alarm is triggered, the device will send an app alert and captured images to the registered account(s) simultaneously. Please Note: If you are logged out of the SW SECURITY app during this time, this function will not occur.



To set an account to receive the images, select the device in the app, then select "Settings", and "Alarm Settings." Enter the app ID you would like to receive the alerts and images. You can use up to five accounts to receive these alerts.

The alarm will sound as soon as motion has been detected. The buzzer will sound until the device has been disarmed. Disarming the motion is done the same way as turning the alarm on.

8. Voluming Settings

- 1) To adjust the volume, select the settings icon in the upper right corner of your device listed on the Device List screen. Select settings. Select media settings.

9. Updating Your Device

Select the device on the Devices page in the SW SECURITY app and navigate to Settings>Check for Updates. If an update is available, select the update, and follow the on-screen prompts.

10. Warranty

1. Streetwise Security Products extends a one year warranty for defects in materials or workmanship, with the following exceptions:

- A. The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, the affixing of any attachment not provided with the product, loss of parts.
- B. The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.

2. Conditions of Sale: Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages.

3. To Obtain Service: Contact the Authorized Dealer from whom you purchased this unit for a Return Merchandise Authorization. The return unit must be sent postage prepaid and proof of purchase is required. Damage or loss occurring during shipment is not covered by this warranty.